STEPHANIE COUTAS COLLECTIONS

OUTDOOR MAINTAINANCE MANUAL



OUTDOOR FABRIC

USAGE

For outdoor use only.

Fabrics should be cleaned regularly before substances such as dirt and food particles are allowed to accumulate on and become embedded in the fabric.

Always set down items gently onto the surface. To retrieve items lift them off the surface - do not slide them.

Kee flay ps and ort resonie devich as ra diesus, coves, and avoid long Ensure the pieces do not encounter extremes of temperature and humidity as this may cause movement in the surface material and delamination.

CLEANING

Remove any residual soil by lightly brushing or scraping the stain. Attempt to remove stain by sponging with water.

If further cleaning is needed, apply light mist of our recommended cleaning solution using a spray bottle.

Work the solution into the stain by lightly scrubbing the area with a sponge or very soft bristle brush.

Remove cleaning solution with a wet-vac if possible, but at the very least blot with a clean soft towel or sponge to remove the stain and excess cleaning solution. Repeat steps 2-4 until stain is removed. Rinse thoroughly until all soap residue is removed.

Use Sunbrella Cleaning Solutions line . It include Clean $^{\text{TM}}$ Multi-Purpose Fabric Cleaner, Extract $^{\text{TM}}$ Oil Based Stain Remover, and Restore $^{\text{TM}}$ Fabric Protector & Repellent

Notes: Over time, these materials shows variations in color, tone, and texture, which occurs due to normal temperature, humidity, and seasonal changes. Natural markings are an inevitable and beautiful characteristic of surfaces covered with these materials.

WOOD WITH MONOCOAT FINISH

USAGE

Handle with care.

Knocking against hard objects or coming into contact with sharp or hard objects can damage the surface.

Prevent direct contact with extremes of heat, cold and moisture. Use coasters, keep plants inside drip - proof planters and serve foods on place mats and heatproof pads.

To prevent damage apply felt to lamp bases, vases, ashtrays and other accessories that are placed on the surface.

Always set down items gently onto the surface. To retrieve items lift them off the surface do not slide them.

CLEANING

Gently dust with a soft, cotton cloth or clean with a slightly damp soft cloth Wipe away any fluids that spill immediately.

Do not apply any foreign substance or cleaning agent to the surface.

Only if the surface has lost its sheen should one buff using a spare amount of high quality furniture wax. Apply strongly with a clean cloth wrapped around a finger and buff off with a wax free cloth.

ENVIRONMENT

Keep out of direct sunlight as this will cause the finished surface to lose its durability and may cause discoloration.

Keep away from direct heat sources such as radiators, stoves, and avoid long use of laptops and other electronic devices on the surface.

Do not submerge in water.

Ensure there are no extreme fluctuations in temperature and humidity as this may cause movement in the wood substrate and cause cracking of the lacquer surface.

Pieces should be kept within temperatures of $50^{\circ}-75^{\circ}$ Fahrenheit $/10^{\circ}-25^{\circ}$ Celsius and within a Relative Humidity of 40-65%. We highly recommend installing humidifiers in the rooms where your pieces are kept to minimize impact of changes in the weather.

Notes: It is advisable to get chips and damage repaired to avoid further problems with the surface separating from the substrate. Repair should only be done by a restorer experienced in working with natural finish.

STONE

USAGE

Handle with care.

Stone table tops are naturally subject to chipping, particularly the edges when tables are moved or pushed together, knocking against hard objects or coming into contact with sharp or hard objects can damage the surface and the edges.

Use coasters, keep plants inside drip - proof planters and serve foods on place mats and heatproof pads.

To prevent damage apply felt to lamp bases, vases, ashtrays and other accessories that are placed on the surface.

Always set down items gently onto the surface. To retrieve items lift them off the surface - do not slide them.

Avoid placing hot objects directly on stone as this will cause discoloration and marking.

Do not apply bleach or vinegar to clean your stone top.

CLEANING

Brush off loose dirt & dust.

Create cleaning solution of warm clean water and mild soap.

Use a soft, clean cloth (one that wont bleed color) or sponge.

Rinse thoroughly until all soap residue is removed.

Dry thoroughly after cleaning with clean cloth to prevent water spots.

PVC ROPE

USAGE

For outdoor use only

PVC rope can fade and break when exposed to continuous sun heat and extreme coldness. A protective cover can protect the PVC rope from being damaged. Do not cover it when it is still wet, which can result in growing mold and mildew. Cover can prevent leaves and debris from falling onto the furniture.

To prevent damage to the surface apply felt to lamp bases, vases, ashtrays and other accessories that are placed on these surfaces. Set down items gently onto the surface. To retrieve items lift them off the surface-do not drag orslide them.

PVC rope can become brittle and fade when placed under constant sunlight. Putting the furniture under an overhead shelter can effectively protect the furniture and extend its service life.

Do not use harsh cleaner on PVC rope. Use clear water or soapy water for regular cleaning.

CLEANING

Before starting to clean, take all cushions and covers off the furniture. Clean these accessories independently by removing dust, sterilizing, and drying. Put them back on it at the end of the cleaning process.

Use a vacuum to remove leaves, dust, and debris left on the PVC rope pieces. Pay more attention to the corner and the rope strands of the furniture where there is usually some hidden dirt.

Use a cloth or sponge with soapy water or just clean warm water to scrub gently the surface of the rope furniture. Then let them dry naturally.

For some stubborn dirt and stain, use a soft brush with a tiny amount of cleaner. Rub constantly but softly until the stain fades. Then wipe thoroughly with clean warm water and let the furniture dry.

 $\textbf{Notes:} \ \textbf{Besides daily cleaning, some protective maintenance is necessary for a PVC rope furniture.}$



STEPHANIE COUTAS COLLECTIONS

www.stephaniecoutas.com

ac@french-lifestyle.fr

+33 6 12 63 16 17

